




Charging Dock for Xbox Wireless Controllers

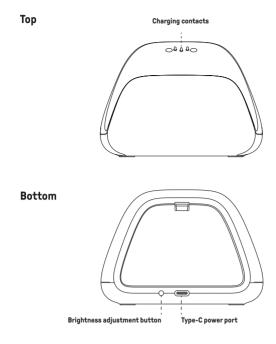

Battery Installation

- Please ensure the battery is installed in the correct orientation. Incorrect installation may prevent the battery from charging and could lead to potential malfunctions
 There are two types of battery doors: one is compatible with Xbox One Wireless Controllers, and the other is compatible with Xbox Series Wireless Controllers

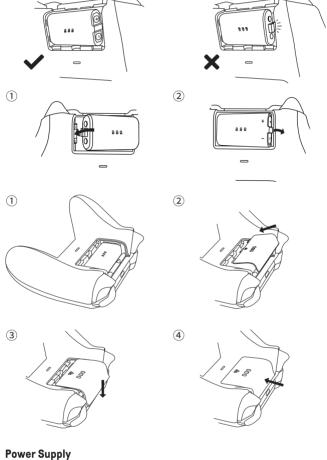

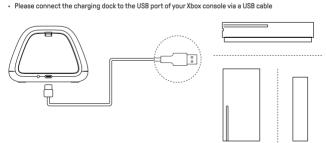

- **Battery Charging**
- · Place the Xbox controller with the installed battery on the charging dock; the amber light will turn on and stay solid • Built-in 1100mAh rechargeable battery with 22 hours of play time and with 3.5 hours charging time

Power Indicator

 $\bullet \ \ \text{You can press the brightness control button to switch the power indicator light between bright and dimensional control button and the power indicator light between bright and dimensional control button and the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between brightness control button to switch the power indicator light between the$ **LED indicator –**White LED lights up for 3 seconds Power is on Battery charging Charging error Amber light stays solid Amber light blinks White LED stays solid Fully charged

Safety Guidelines

Leakage of ingredients contained within the battery pack, or the combustion products of the ingredients, can cause personal injury as well as damage to the game controller. Avoid contact with skin. If contact occurs, immediately wash thoroughly with soap and water. If liquid leaking from a battery pack comes into contact with your eyes, immediately flush thoroughly with water and see medical attention right away.

- Contact with your eyes, miniminately must choosing my man make and occur
 to avoid battery leakage:

 Do not expose battery to excessive physical shock, vibration, or liquids
 Do not disassemble, repair, or deform the battery
 Do not dispose of battery pack in a fire
- - Do not touch the terminals of the battery, or cause a short circuit between the terminals with a metal object Do not peel or damage the battery label Replace only with the same type of battery pack Insert batteries with the correct polarity

Support