# 8Bitdo FC30 Pro



Everything Old Is New Again



Instruction Manual

Name: 8Bitdo FC30 Pro Mode: FC30 8Bitdo Tech HK Ltd

## English

Thank you for buying the 8Bitdo FC30 Pro! It's the best for fighting, shooting action and emulator games.

The FC30 Pro supports many devices and platforms thanks to the multiple modes it can switch between. PC, Smart phone, iPad, Notebook, Android, iOS, Mac OSX, Windows are supported. Making the FC30 Pro ideal for all popular systems

To relive the happy memories of the past.

8Bitdo

### Power OFF: Hold down (1988) for 3 seconds.

	Mode 1	Mode 2	Mode 3	Mode 4	Mode 5
	Joystick	Bluetooth Keyboard	iCade	Emu-Touch Screen	USB Joystick
Power ON (Hold down key for 3 seconds)		(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	(I)	Power on first, then connect USB cable
Blue LED	•	•••••	·•·•	· • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • · • • • • • • • • • • • • • • • • • • • •	Can be ignored
Support system	<i>#</i>	<i>₹</i>	<b>⊕ €</b>	<b>⊕ €</b>	<i>***</i>
Memo	PC can use Bluetooth Adapter.	Power+B+R power on. The 2nd Keyboard code.	Input method should be English.	Need ROOT Need Jailbreak	Also charge GamePad battery

The most common situations

1.For Android devices, use Mode 1. 2.For iOS devices, use Mode 2 or 3. 3.For games that only support touchscreen controls, use Mode 4.

To turn Power OFF: Hold down (10 tur To activate the conditions below, you will need to clear the pair information on the FC30 Pro

Press the ( button for more than 3 seconds to clear pair information. When both LED lights blink once

ect other devices to the Fc30 Pro again

1.Connect the FC30 Pro to another device.

2.Change between Mode 1, 2 or 3

3.Request password (to pair), if not "0000".

Note: Make sure the battery of the FC30 Pro is not empty. Otherwise use the USB-cable to charge the device.

## For two players: iOS/Mac OSX/Android/PC

Player 1 press (1978) + B to power on the FC30 Pro. (LED light will blink twice.)
Player 2 press (1978) + B + R to power on the FC30 Pro. (LED light will blink once, for a longer period of time.)
Both FC30 Pro will provide a different key code password to work with Bluetooth. The mapping of the k eys can be done in game.

## Multiplayer mode(s):

Android/Mindows: Connect the FC30 Pro with the US8-cable or Bluetooth. Multiplayer support depends on the game itself.

## Mode 1, 2 and 3

Manual in Detail: (Note: Make sure the battery of the FC30 Pro is not empty. Otherwise use the USB-cable to charge the device.)

# Establishing Bluetooth connection with Mode 1, 2 or 3 activated:

Follow instructions on page Fast Startup Figure, to turn on the FC30 Pro in mode 1, 2 or 3

- 1.Scan for Bluetooth devices on your Android/iOS device.
- 2.Select "8Bitdo FC30 Pro" in the list of available devices.
- 3.Map the keys in the app or emulator you will be playing

## Mode4

Emu-Touchschreen mode

### Note: Android needs ROOT

- 1.Download the official 8Bitdo APP/APK from the official site at www.8Bitdo.com.
- 2. Follow the instructions on page Fast Startup Figure, to turn on the FC30 Pro in mode 4.
- 3.Run the 8Bitdo app and scan for Bluetooth devices. When detected tap "8Bitdo FC30 Pro" to pair
- 4.If asked for pairing code (password), enter "0000".
- 5.In Emu-Touch screen mode, press SELECT+START to activate I 8Bitdo app.
- 6. Finally, drag and drop buttons in order to map the keys to your satisfaction. Press SELECT+START to finish set-up.

#### Warning:

Android: After using Mode 4 and you wish to use Mode 1, 2 or 3, you will need to clear pairing information at system Bluetooth first and then scan, pair again.





Tip: Double tap DPad or use two fingers can zoom it to fit games.

## Mode5

Windows USB Cable Mode

1.Use the enclosed USB-cable to connect the FC30 Pro to your PC. Your PC will immediately recognize the device.



It's time to release an extend-firmware for expansion functions. If you don't want to use those powerful function please keep using regular firmware.

#### Extend-firmware

More powerful function available, such as emulate RETRON5 controller, Wii controller etc .. More powerful function expend in the future. For more detail please visit: http://www.8bitdo.com/nes30pro/extend-firmware.html

## Upgrade firmware via PC or Mac

- 1.Press (10(18) + (17(15)) on the FC30 Pro. Yellow LED lights will be blinking.
- 2.Use the enclosed USB-cable to connect the FC30 Pro to your PC.
- 3.Download the FC30 Pro upgrade software from the www.8Bitdo.com and run the 8Bitdo\_update.exe file
- in Windows folder ( WIN ) , or in MacOS folder ( OSX )
- 4.Select the FC30Pro&NES30Pro\_Firmware.dat file and run the update.

### LED Light(s) status

- 1.Blue light flashing: Bluetooth disconnected.
- 2.Solid Blue light (Breadth in 5s): Bluetooth connected.
- 3. Green light on: Battery charging.
- 4.Green light off: Charging completed.
- 5.Red light on: Battery low.
- 6.No LED lights active: Power off or Sleep mode.

### To restore the FC30 Pro to factory settings hold down the (DB) button for 8 seconds.

The firmware of the FC30 Pro can be upgraded and functions may be changed or added. The final notices and features can be checked on the official website.

Disclosure: Second English version of manual revised by Joshy Scheers, Chief Editor of 3rd-strike.com. Future versions, may or may not be revised by other translators and thus this data may or may not be accurate

input Power rating Battery type Battery capacity

Mass

DC5V,500mA

Built-in rechargeable Lithium-Polymer battery

Approx.210g (7.4 oz)

is trademark of Google Inc All other trademarks are the property of their respective owners. Any mention of Microsoft, Windows, Apple, iPad, iPhone, Google and Android is simple to indicate device compatibility and does not constitute an endorsement by any of the respective companies

