
# 8BitDo

#### Media Remote for Xbox - instruction manual

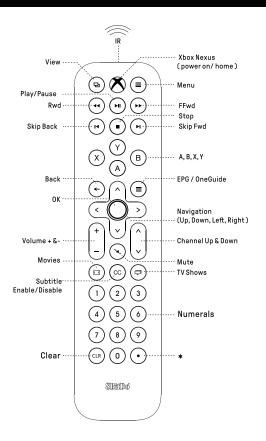

- · Certain features are available only in certain countries and regions
- To control other devices through the Xbox console, please ensure that your device supports HDMI-CEC and this function is enabled. You can consult your device manufacturer for details
- · Backlight turns off after 5 seconds of no operation

## Connection

Automatic connectivity via Infrared when in range, no pairing needed

- Compatible with Xbox Series X | S 、 Xbox One 、 Xbox One S | X
- Please aim directly at your Xbox for the best control and ensure there is no obstruction between the media remote and the console when using

## **Battery**

 


2

Slide the battery compartment cover upward to open it



· Insert into the battery case



- · Do not mix old and new batteries
- Low battery- Backlight stops lighting up, please change the battery


### **Safety Warnings**

lack

- Please always use batteries, chargers, and accessories provided by the manufacturer.
  The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved
- Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
- Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions Avoid clasming, disassembling, particuling, or etempting to finding the device of its battery, as can be dangerous.
   Any unauthorized changes or modifications to the device will void the manufacturer's warranty.

• please visit support.8bitdo.com for further information & additional support

#### 媒体遥控器 — 使用说明

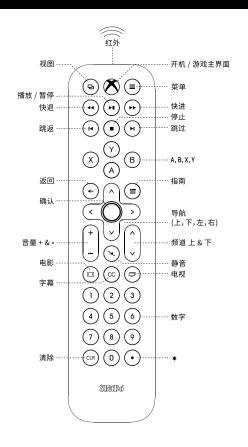

- \* 某些功能仅适用于部分国家或地区
- 若要通过 Xbox 主机控制其他设备,请确保您的设备支持 HDMI-CEC 功能并已启用, 详情请咨询您的设备制造商
- \* 5 秒无操作后自动关闭背光

## 连接

IR 红外控制,无需配对,可直接使用

- \* 支持 Xbox Series X | S、Xbox One、Xbox One S | X 主机
- 使用时应使遥控器与Xbox主机之间保持直线对准,且无遮挡

 
## 电池

- \* AAA 电池 x 2
- 2
- \* 从遥控器背面底部上滑,打开电池盖



3

\*把AAA电池放入指定位/电池仓



- \* 为保证使用体验,请避免将新电池与旧电池混合使用
- \* 低电量时背光按键会自动关闭,请及时更换电池

### 安全警示

ø

- \* 请使用制造商的电池、充电器、配件。 \* 在用户使用第三方的配件时,制造商不能对用户的安全负责。
- 请勿自行拆卸、改装或修理设备。请勿挤压、拆解、刺穿或尝试改装设备及电池。

# \* 对设备的任意变动或改装,将导致制造商对设备不予保修。

#### Support



\* 请访问 support.8bitdo.cn 了解详细信息。