

Media Remote for Xbox - instruction manual

Xbox Nexus View --(power on/home) (B) A, B, X , Y EPG / OneGuide (≦) ΩK Navigation (Up, Down, Left, Right) Volume + &-Channel Up & Down Play / Pause Mute (H) Stop Skip Back · Skip Fwd SIEMIDo

- Certain features are available only in certain countries and regions
- To control other devices through the Xbox console, please ensure that your device supports HDMI-CEC and this function is enabled. You can consult your device manufacturer for details
- Backlight turns off after 5 seconds of no operation

Connection

Automatic connectivity via Infrared when in range, no pairing needed

- Compatible with Xbox Series X | S 、 Xbox One 、 Xbox One S | X
- Please aim directly at your Xbox for the best control and ensure there is no obstruction between the media remote and the console when using

Battery

1

- AAA Battery x 2



 
2

• Slide the battery compartment cover upward to open it



3

• Insert into the battery case



- Do not mix old and new batteries
- Low battery- Backlight stops lighting up, please change the battery


Support



• please visit support.8bitdo.com for further information & additional support

8BitDo

媒体遥控器 — 使用说明

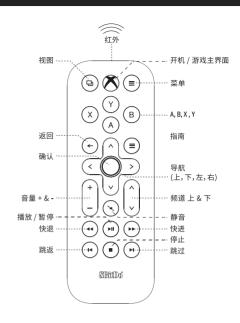

- * 某些功能仅适用于部分国家或地区
- 若要通过 Xbox 主机控制其他设备,请确保您的设备支持 HDMI-CEC 功能并已启用, 详情请咨询您的设备制告商
- * 5 秒无操作后自动关闭背光

连接

IR 红外控制,无需配对,可直接使用

- * 支持 Xbox Series X | S、Xbox One、Xbox One S | X 主机
- * 使用时应使遥控器与Xbox主机之间保持直线对准,且无遮挡

电池

1

* AAA 电池 x 2



 
2

* 从遥控器背面底部上滑,打开电池盖



3

* 把AAA电池放入指定位 / 电池仓



- * 为保证使用体验,请避免将新电池与旧电池混合使用
- * 低电量时背光按键会自动关闭,请及时更换电池

技术支持

*

* 请访问 support.8bitdo.cn了解详细信息。