


N64 Bluetooth Controller

Instruction Manual

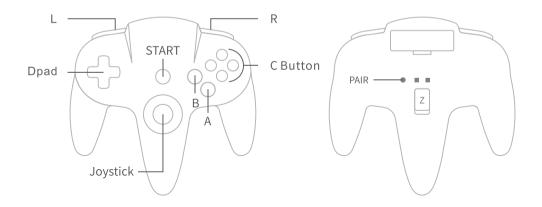

® Bluetooth Connection



Android **!!** Windows



- Press and hold START for 3 seconds to power on the controller. Blue LED will blink once per second.
- 2. Press and hold PAIR for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
- Go to your Android/Windows/macOS device's Bluetooth setting to pair with [8Bitdo N64 GamePad].
- 4. LED will be solid blue when connection is successful.

,↑, Firmware Upgrade (Windows/macOS)

- 1. Download the firmware file first from support.8bitdo.com.
- 2. Decompress the file, open it and run [8Bitdo_Upgrade].
- 3. Press and hold START + L + R to put your controller in upgrading mode. Yellow light will start to blink if the controller has successfully entered [Firmware Upgrade Mode].
- 4. Plug the Micro USB cable into you controller then connect it to your PC or macOS.
- 5. Click on [USB Upgrade] in the [8Bitdo_Upgrade] app, search for [Firmware_N64.dat] in the pop-up window and run it.
- 6. Un-plug your controller when the upgrade process is done, then restart it before using.

