

Thank you to buy NES30 GamePad, It' s the best for fighting, shooting, action and emulator games.














NES30 has Multi-mode, it supports PC, Smart phone, Pad, Notebook, Android iOS, Mac OSX, Windows. All popular systems and devices support.

For the happy memory of old days

8Bitdo

FAST STARTUP

Power OFF: Hold down START for 3 seconds.

	Mode 1	Mode 2	Mode 3	Mode 4	Mode 5
	Joystick	Bluetooth Keyboard	iCade	Emu-Touch Screen	USB Joystick
Power ON (Hold down key for 3 seconds)					Auto connection
Blue LED					Can be ignored
Support system					
Memo	PC can use Bluetooth Adapter.	START+B+R power on. The 2nd Keyboard code.	Input method should be English.	Need ROOT Need Jailbreak	Also charge NES30 battery

The most common situation:

1. For Android devices, use Mode 1.
2. For iOS devices, use Mode 2 or Mode 3.
3. For pure touch screen games, use Mode 4.

Power OFF: Hold down START for 3 seconds.

The below conditions, you need to clean pair info. in the NES30. Holding SELECT for more than 3 seconds both LED will blink once, then you can connect NES30 to any devices again.

1. Connect NES30 to another device.
2. Change work mode between mode 1, 2 or 3.
3. Asking input pair code, if not "0000".

Manual in detail: (Note: Make sure the GamePad battery is NOT empty! If empty ,use USB cable charge it.)

For two players: iOS/Android/Mac OS/PC

1P START+B power on(LED blink twice). 2P START+B+R power on(LED long blink once).

Both NES30 work in Bluetooth keyboard mode with different key code. Then mapping keys in the game.

Multiplayer modes:

Android / Windows: NES30 connect console with USB cable, can support multiplayer, it depend on the game.



Mode 1,2,3

Manual in Detail:

(Note: Make sure the GamePad battery is NOT empty! If empty use USB cable charge it.)

Mode 1,2,3 Bluetooth connection:

1. Turn on the power in mode 1,2,3.
2. Scan Bluetooth on Android or IOS device, and tap the "8Bitdo NES30 GamePad" to pare.
3. Map the keys in the App or Emulator you will be playing.




Mode 4

Emu-Touch Screen mode: (Android need ROOT, iOS need Jailbreak.)

Android/iOS : (Need ROOT,Need Jailbreak)

1. Download NES30 App from the official website at www.NES30.com.
(iOS user can add source <http://app.8bitdo.com> in Cydia)
2. Turn ON power in Mode 4.
3. Run NES30 App and scan Bluetooth device, then tap the "8Bitdo NES30 GamePad" to pare.
4. If asked for pairing code, enter "0000" .
5. In Emu-touch screen mode, press hotkey SELECT+START to activate NES30 App
6. Now, just drag and drop, map the keys to the right place on screen, press **SELECT+START** to finish.

Important: Andoird: After use Mode 4, and want to use mode 1,2,3, you need to Unpair NES30 at system Bluetooth setting and then pair it again. iOS: After use Mode 4, system Bluetooth is unavailable. Now, run NES30 app, and make sure NES30 app Bluetooth OFF, then wait 20 seconds, system Bluetooth will be available again.

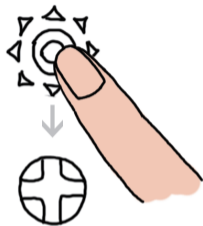


Tip: Double tap DPad or use two fingers can zoom it to fit games.

After use Mode 4, if you want to use Mode 1,2 and 3:

Note: For Android user, need to unpair the "8bitdo NES30 GamePad" first, and then reconnect it. For IOS user, system Bluetooth will be unavailable, you must run NES30 software, and turn off Bluetooth in the software. Then, system Bluetooth will be available in 20 seconds.

Windows USB Cable Mode

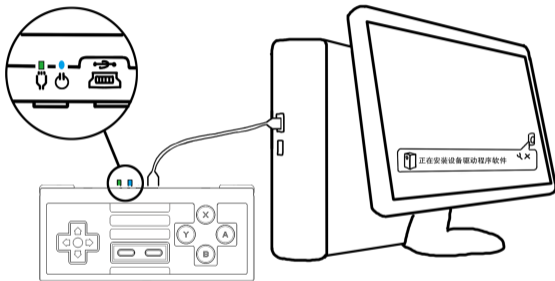

1. Connect to USB port with USB cable, computer will recognize it.
 2. Map the keys of the Game you will be playing.
- * Also charge NES30 battery



Wiimote Mode

1. In Wii Game, use Wiimote press HOME key can enter Wiimote setting.
2. Power start NES30 with START+Y.
3. Press the red button just beside the SD slot on Wii console. A couple of seconds the 1P or 2P battery icon will turn light from gray. Then mean NES30 connect to Wii.

Tip: if you want to connect NES30 to 1P, you need to take battery out from 1P Wiimote to disconnect it from Wii.


Redefine Wiimote mode button mapping, NES30 ---> Wiimote

Wiimote	Direction keys	B	One	A	Two	Minus	Plus
FC30	Direction keys	X	Y	A	B	SELECT	START

Upgrade firmware from PC

FIRMWARE UPGRADE

- 1) Turn ON: Hold down **START+L+R** for 3 seconds. Green+Blue LED will be flashing.
- 2) Connect NES30 with PC's USB port with a USB cable.
- 3) Download the NES30 upgrade software from official website and run update.exe file.
- 4) Select firmware file bluetooth_firmware.dat and update.

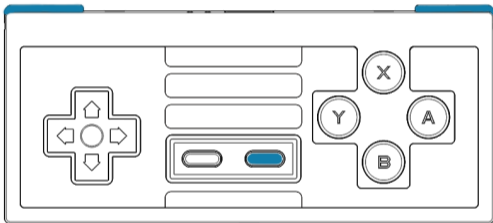



LED Light Status

1. Blue light flashing: Bluetooth disconnect.
2. Solid blue light: Bluetooth connected.
3. Green light flashing: Battery charging.
4. Green light OFF: Charging completed
5. Solid red light: Battery low.
6. All lights off: Power OFF or Sleep Mode.

Restore factory settings: Hold down START for 12 seconds.

The firmware of NES30 GamePad can be upgrade, functions will be changed or added, the final feature can be checked on the official website.



iPad and iPhone are trademark of Apple Inc.

Android is trademark of Google Inc.

Windows is trademark of Microsoft Inc.

All other trademarks are the property of their respective owners.

Any mention of Microsoft, Windows, Apple, iPad, iPhone, Google and Android is simple to indicate device compatibility and does not constitute an endorsement by any of the respective companies

www.8bitdo.com

www.NES30.com