



SN30/SF30 2.4g — instruction manual

SN30/SF30 2.4g — 使用说明

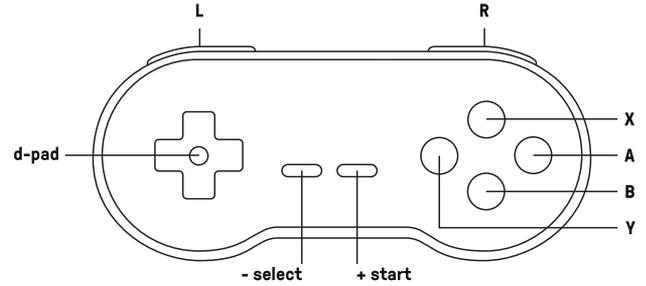

NES/SNES/SFC Classic Edition (wireless connection)

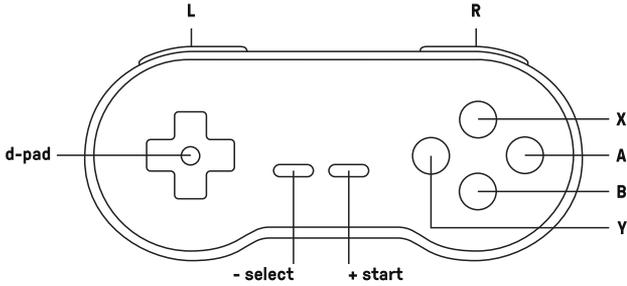

1. Plug the 2.4G Retro Receiver into your NES / SFC / SNES Classic Edition
 2. Press **start** on your controller to connect to the Retro Receiver
 3. LED will be solid blue when connection is successful
- Home Menu Access for NES/SNES/SFC Classic Edition, **select + down** = RESET
 - If connection is lost or you wish to pair with a new retro receiver, press and hold **select** on the controller for 3 seconds. Blue LED will rapidly blink and be solid blue when connection is successful

NES/SNES/SFC Classic Edition (无线连接)



- * 将接收器插入 NES / SFC / SNES Classic 手柄端口, 轻按 [start] 键即可连接, 连接后蓝灯长亮。
- * 如连接丢失或重新适配接收器, 可长按 [select] 键 3 秒进入配对状态, 蓝灯快速闪烁, 连接成功后, 蓝灯长亮表示配对成功。
- * 回到主菜单: select + down = RESET。

Windows/macOS/Android (wired connection)



1. Connect the controller to your Windows/macOS/Android via the USB cable
 2. LED will be solid blue when connection is successful
- X-Input: press and hold **X + start** for 3 seconds, blue LED blinks twice to indicate mode activation
 - D-Input: press and hold **B + start** for 3 seconds, blue LED blinks twice to indicate mode activation
 - macOS: press and hold **A + start** for 3 seconds, blue LED blinks twice to indicate mode activation
 - Default mode: D-input

Windows/macOS/Android (有线连接, 有线优先)



- 用 USB 线将手柄连接到 Windows/macOS/Android 设备 USB 端口, 连接后蓝灯长亮。
- * 按住3秒 [X + start] 键: Xinput 模式, 蓝灯闪两下表示成功。
 - * 按住3秒 [B + start] 键: Dinput 模式, 蓝灯闪两下表示成功。
 - * 按住3秒 [A + start] 键: macOS 模式, 蓝灯闪两下表示成功。
 - * 默认 Dinput 模式。

battery



status –		LED indicator –
low battery mode	→	power LED in red
battery charging	→	power LED in green
battery fully charged	→	power LED turns off

- Built-in 180 mAh Li-on with 25 hours of play time
- Rechargeable via USB cable with 60 minutes charging time

电池



电量状态		指示灯状态
电量不足	→	红灯亮
充电中	→	绿灯亮
充电完成	→	绿灯熄灭

- * 内置 180 mAh 锂电池, 可持续使用约 25 小时, 充电时间约 60 分钟。

Safety Warnings



- Please always use batteries, chargers, and accessories provided by the manufacturer.
- The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved accessories.
- Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
- Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions can be dangerous.
- Any unauthorized changes or modifications to the device will void the manufacturer's warranty.

安全警示



- * 请使用制造商的电池、充电器、配件。
- * 在用户使用第三方的配件时, 制造商不能对用户的安全负责。
- * 请勿自行拆卸、改装或修理设备。
- * 请勿挤压、拆解、刺穿或尝试改装设备及电池。
- * 对设备的任意变动或改装, 将导致制造商对设备不予保修。

power saving



- Sleep mode - 15 minutes with no use

自动关机



- * 15 分钟无操作会自动休眠。

support



- Please visit support.8bitdo.com for further information & additional support

固件升级



- * 请访问 <http://support.8bitdo.cn> 了解详细信息。