

8Bitdo SNES30 GamePad



Everything Old Is New Again



Instruction Manual
Name: 8Bitdo SNES30 GamePad Mode: NES30 8Bitdo Tech HK Ltd.

English

Thank you for buying the 8Bitdo SNES30 GamePad! It's the best for fighting, shooting action and emulator games.

The SNES30 GamePad supports many devices and platforms thanks to the multiple modes it can switch between. PC, Smart phone, iPad, Notebook, Android, iOS, Mac OSX, Windows are supported. Making the SNES30 GamePad ideal for all popular systems and devices.

To relive the happy memories of the past.

8Bitdo

FAST STARTUP

Power OFF: Hold down START for 3 seconds.

	Mode 1	Mode 2	Mode 3	Mode 4	Mode 5
	Joystick	Bluetooth Keyboard	iCade	Emu-Touch Screen	USB Joystick
Power ON (Hold down key for 3 seconds)					Auto connection
Blue LED					Can be ignored
Support system					
Memo	PC can use Bluetooth Adapter.	START+B+R power on. The 2nd Keyboard code.	Input method should be English.	Need ROOT	Also charge SNES30 battery

Modes:

- 1.For Android devices, use Mode 1.
- 2.For iOS devices, use Mode 2 or 3.
- 3.For games that only support touchscreen controls, use Mode

To turn off the controller: Hold down START button for 3 seconds.

To connect the joystick SNES30 Pro to another device:

Delete pairing information of SNES30. Holding the SELECT button down for more than 3 seconds. When both LED lights have flashed once, NES30 Pro can be connected to other devices.

- 1.Connect the SNES30 to another device.
- 2.Change between Mode 1, 2 or 3.
- 3.Request password (to pair), if not "0000".

Note: Make sure the battery of the SNES30 is not empty. Otherwise use the USB-cable to charge the device.

For two players: IOS/Mac OSX/Android/PC

Player 1 press START + B to power on the SNES30 GamePad. (LED light will blink twice.)
Player 2 press START + B + R to power on the SNES30 GamePad. (LED light will blink once, for a longer period of time.)
Both SNES30 GamePads will provide a different key code password to work with Bluetooth. The mapping of the keys can be done in game.

Multiplayer mode(s):

Android/Windows: Connect the SNES30 GamePad with the USB-cable or Bluetooth. Multiplayer support depends on the game itself.

Mode 1, 2 and 3

Manual in Detail:

(Note: Make sure the battery of the SNES30 GamePad is not empty. Otherwise use the USB-cable to charge the device.)

Establishing Bluetooth connection with Mode 1, 2 or 3 activated:

Follow instructions on page Fast Startup Figure, to turn on the SNES30 GamePad in mode 1, 2 or 3.

- 1.Scan for Bluetooth devices on your Android/iOS device.
- 2.Select "8Bitdo SNES30 GamePad" in the list of available devices.
- 3.Map the keys in the app or emulator you will be playing.

Mode4

Emu-Touch schreen mode

Note: Android needs ROOT

 
 
- 1.Download the official 8Bitdo APP/APK from the official site at <http://www.8bitdo.com/Android-APP.html>
- 2.Follow the instructions on page Fast Startup Figure, to turn on the SNES30 in mode 4.
- 3.Run the 8Bitdo app and scan for Bluetooth devices. When detected tap "8Bitdo SNES30 GamePad" to pair.
- 4.If asked for pairing code (password), enter "0000".
- 5.In Emu-Touch screen mode, press SELECT+START to activate 8Bitdo APP.
- 6.Finally, drag and drop buttons in order to map the keys to your satisfaction. Press SELECT+START to finish set-up.



Download APP

Warning :

Android: After using Mode 4 and you wish to use Mode 1, 2 or 3, you will need to clear pairing information at system Bluetooth first and then scan, pair again.

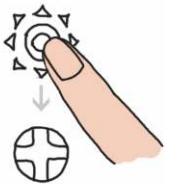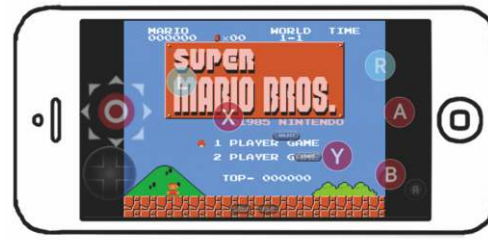


Tip: Double tap DPad or use two fingers can zoom it to fit games.

Mode5

Windows USB Cable Mode

 - 1.Use the enclosed USB-cable to connect the SNES30 GamePad to your PC. Your PC will immediately recognize the device.
- 2.You will be able to map the keys, in the game options of the game you are playing.

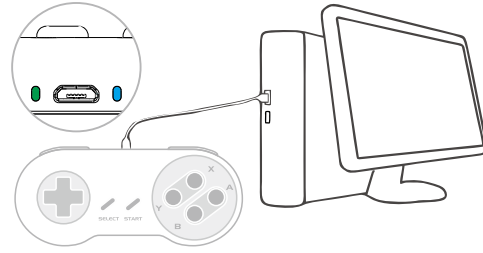

Note: When connecting the SNES30 GamePad to your PC the battery will also charge.

Extend-firmware

It's time to release an extend-firmware for expansion functions. If you don't want to use those powerful function, please keep using regular firmware.

Extend-firmware:

More powerful function available, such as emulate RETRON5 controller, Wii controller etc .. More powerful function expend in the future. For more detail please visit: <http://www.8bitdo.com/snes30/manual.html>

Upgrade firmware via PC or Mac

- 1.Hold down START+L+R on the SNES30 GamePad. Green + Blue LED lights will be blinking.
- 2.Use the enclosed USB-cable to connect the SNES30 GamePad to your PC.
- 3.Download the SNES30 GamePad upgrade software from the www.SNES30.com and run the 8Bitdo_update.exe file in Windows folder (WIN) , or in MacOS folder (OSX) .
- 4.Select the Bluetooth_firmware.dat file and run the update.

LED Light(s) status

- 1.Blue light flashing: Bluetooth disconnected.
- 2.Solid Blue light: Bluetooth connected.
- 3.Green light flashing: Battery charging.
- 4.Green light off: Charging completed.
- 5.Solid Red light: Battery low.
- 6.No LED lights active: Power off or Sleep mode.

To restore the SNES30 GamePad to factory settings hold down the START button for 8 seconds.

The firmware of the SNES30 GamePad can be upgraded and functions may be changed or added. The final notices and features can be checked on the official website.

Disclosure: Second English version of manual revised by Joshy Scheers, Chief Editor of 3rd-strike.com. Future versions, may or may not be revised by other translators and thus this data may or may not be accurate.

Specifications

input Power rating	DC5V,500mA
Battery type	Built-in rechargeable Lithium-Polymer battery
Battery capacity	480mAh
Mass	Approx.91g

iPad and iPhone are trademark of Apple Inc.
Android™ is trademark of Google Inc.
Windows is trademark of Microsoft Inc.
All other trademarks are the property of their respective owners.
Any mention of Microsoft, Windows, Apple, iPad, iPhone, Google and Android is simple to indicate device compatibility and does not constitute an endorsement by any of the respective companies

www.8bitdo.com

