

- ① – Xbox button
- ② – profile LED
- ③ – power LED
- ④ – microphone mute LED
- ⑩ – status LED
- ⑫ – profile button
- ⑭ – 2.4G receiver
- ⑮ – 3.5mm audio jack

- Press the **Xbox** button to turn on the Arcade Stick
- Hold the **Xbox** button for 6 seconds to turn off the Arcade Stick
- Hold the **Xbox** button for 12 seconds to force the Arcade Stick off

Windows



- required system: Windows 10 (1903) or above

Wireless connection

1. connect the **2.4G receiver** to the USB port of your Windows device
2. turn the **mode switch** to **gamepad mode**
3. press **Xbox** button to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the device, **status LED** stays solid

Wired connection

1. turn the **mode switch** to **gamepad mode**
2. connect the Arcade Stick to your Windows device via USB cable, wait till the Arcade Stick is successfully recognized by the device, **status LED** stays solid

Xbox



- Xbox Series, Xbox One consoles are supported, Xbox 360 console is not supported
- The latest firmware version of your Xbox console is required

Wireless connection

1. connect the **2.4G receiver** to the USB port of your Xbox device
2. turn the **mode switch** to **joystick mode**
3. press **Xbox** button to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the Xbox console, **status LED** stays solid

Wired connection

1. turn the **mode switch** to **joystick mode**
2. connect the Arcade Stick to your Xbox console via USB cable, wait till the Arcade Stick is successfully recognized by the Xbox console, **status LED** stays solid

Button Swap

 
1. press and hold any of the two buttons you would like to swap, then press the **star button** to swap them
2. press and hold any of the two buttons which have been swapped and press the **star button** to cancel it
- the **profile LED** will blink continuously when the swapped buttons are pressed
- the swapped buttons will not be saved after the Arcade Stick is turned off
- **Joystick, view/menu/share and Xbox buttons** are not supported

Volume Control

- beeps when adjusted to maximum/middle value/minimum



1

- press and hold **profile + up/down** to turn up/down in-game volume

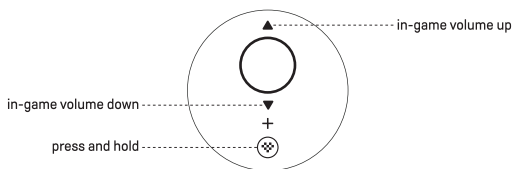

2

  - press and hold **profile + left/right** to adjust the balance between voice and game volume

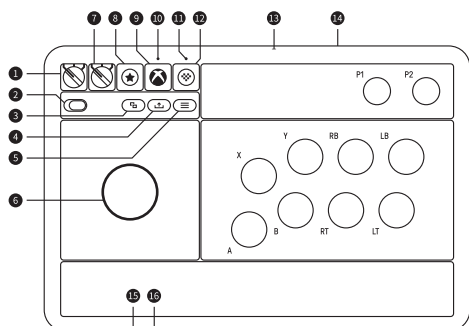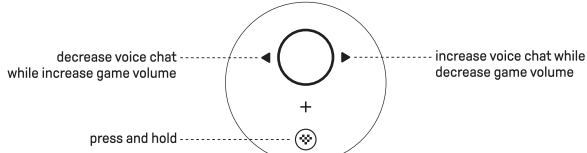

- ① – Xbox 键
- ② – 配置指示灯
- ③ – 电源指示灯
- ④ – 禁麦指示灯
- ⑩ – 状态指示灯
- ⑫ – 配置键
- ⑭ – 2.4G 接收器
- ⑮ – 3.5mm 音频口

- * 开机:按下 **Xbox** 键。
- * 关机:按住 **Xbox** 键 6 秒。
- * 强制关机:按住 **Xbox** 键 12 秒。

Windows



- * 要求 Windows 设备系统版本为 Windows 10 (1903) 或更高版本。

无线连接

1. 将配备的 **2.4G 接收器** 连接到 Windows 设备的 USB 端口。
2. 将 **模式开关** 拨到 **手柄模式** 位置。
3. 按下 **Xbox** 键 开机, 等待系统识别完成后, **状态指示灯** 常亮。

有线连接

1. 将 **模式开关** 拨到 **手柄模式** 位置。
2. 使用 USB 线将摇杆连接到 Windows 设备的 USB 端口, 等待系统识别完成后, **状态指示灯** 常亮。

Xbox



- * 支持 Xbox Series 系列、Xbox One 系列机型, 不支持 Xbox 360 主机。
- * 要求 Xbox 主机系统版本更新到最新版本。

无线连接

1. 将配备的 **2.4G 接收器** 连接到 Xbox 主机的 USB 端口。
2. 将 **模式开关** 拨到 **摇杆模式** 位置。
3. 按下 **Xbox** 键 开机, 等待系统识别完成后, 状态指示灯 常亮。

有线连接

1. 将 **模式开关** 拨到 **摇杆模式** 位置。
2. 使用 USB 线将摇杆连接到 Xbox 主机的 USB 端口, 等待系统识别完成后, **状态指示灯** 常亮。

快速交换按键

 
- * 已交换过功能的按键, 按下时 **配置指示灯** 会持续闪烁。
- * 交换功能不会保存, 关机后恢复默认。
- * **摇杆、视图键、菜单键、分享键、Xbox 键** 不支持交换。
- * 按住任意两个按键, 并按下 **星号键** 即可快速交换 / 取消交换按键功能。

声音调节

- * 可通过组合键调整耳机的音量与声音平衡, 调整到最大 / 最小 / 中间值时会有提示音。


1

- * 按住 **配置键 + 摇杆上、下** 可提高、降低主音量。

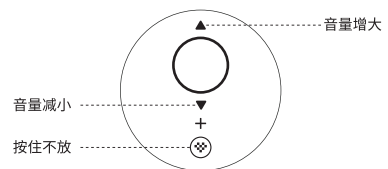

2

 - * 按住 **配置键 + 摇杆左、右** 可调节语音、游戏之间的音量平衡。

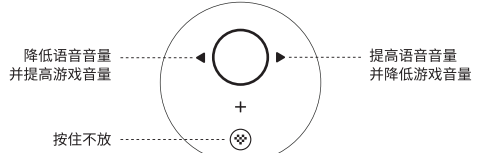

Battery



- | | | |
|-------------------------------|---|------------------------|
| Status LED indicator – | → | LED indicator – |
| low battery | → | red LED blinks |
| battery charging | → | green LED blinks |
| battery full charged | → | green LED stays solid |

- build-in 1000mAh Li-on rechargeable battery with 30 hours of play time (20 hours when connected with headphones) and with 4 hours charging time

电源



- | | | |
|-------------|---|----------------|
| 电量状态 | → | 电源指示灯状态 |
| 电量不足 | → | 红灯闪烁 |
| 正在充电 | → | 绿灯闪烁 |
| 充电完成 | → | 绿灯常亮 |

- * 配备 1000 mAh 可充电式锂电池, 可持续使用约 30 小时 (连接耳机使用约 20 小时), 充电时间约 4 小时。

Ultimate Software

- press **profile button** to activate customised profiles. The profile LED will not light up when using the default setting
- It gives you elite control over every piece of your Arcade Stick: customize button mapping, adjust stick & trigger sensitivity, and vibration control. Please visit support.8bitdo.com for the application

自定义配置

- * 配置后可按下 **配置键** 启用配置, 默认无配置。
- * 请访问 app.8bitdo.cn 获取精英软件, 可对摇杆按键映射、摇杆方向等功能进行自定义配置。

Support

- Please visit support.8bitdo.com for further information & additional support

技术支持

- * 请访问 support.8bitdo.cn 了解详细信息。