

Analogue Dock User Guide


Play Pocket, on the big screen.


Analogue Dock is an amazing companion for Pocket. With Dock you can connect Pocket to your HDTV. Sync up any wireless 8BitDo Bluetooth or 2.4g controller directly to Dock for wireless play. Up to 4 player support. You can connect controllers directly via wired USB, too.

Some features coming in OS v1.1 final.

What's in the box

- Analogue Dock
- Fast charging USB-C Power Supply
- HDMI cable
- USB-C cable

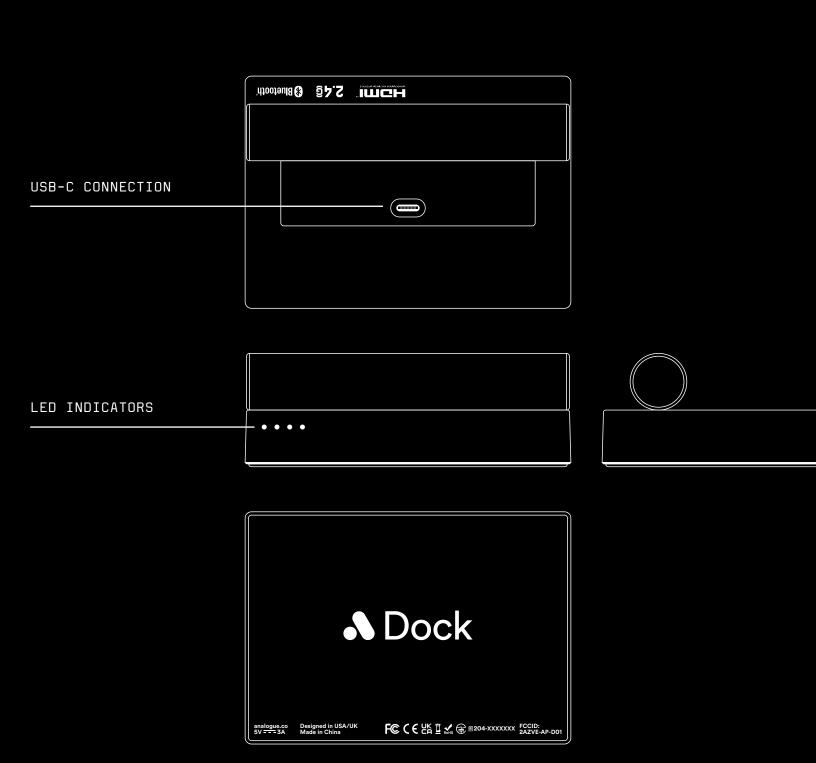

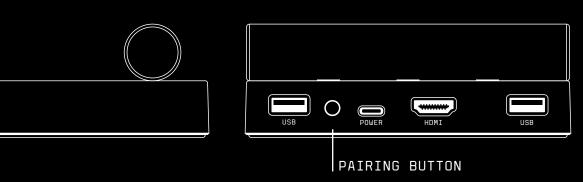

Adding your Dock to your Setup

Analogue Dock is designed to allow you to play your favorite handheld games with Analogue Pocket on an external display or television with your USB, Bluetooth or 8BitDo 2.4G controllers.

When Pocket is Docked, you can output video and audio via Dock's HDMI port.

To use Dock, connect the power supply to the USB-C cable and the cable to Dock, plug in the power supply and insert Analogue Pocket into the vertical USB-C port on Dock.

Dock has two USB ports which can connect and charge controllers. Dock may receive input from up to two Bluetooth controllers. Additionally, Dock may receive input from up to two 8BitDo 2.4G controllers.

Dock will permit Analogue Pocket to be charged when connected to a power supply. Use the included USB-C cable and power supply to ensure optimal operation.

When you first wish to use Dock, Pocket should be turned on. After you pair a controller, you can activate that controller (typically with the Start button) to turn on Dock without having to press the power button on Pocket.

Upgrading Dock's Firmware

In order to Upgrade Dock's Firmware, first you must update Pocket's firmware to Analogue OS v1.1beta or greater. Then plug Dock into its power source, turn on Pocket and place Pocket into Dock's cradle. Pocket now incorporates Dock's firmware and will automatically update Dock's firmware to the version included with Pocket's firmware. You will see an update bar on Pocket's screen and any display connected to Dock. If power is lost while firmware is updating, restart the firmware updating process again after power is restored.

LED Status

Paired
red
rging

Ports and Indicators

HDMI Port

Output video and audio from Analogue Pocket to your display or receiver.

USB Ports x 2

Connect and charge your controllers here.

Power Port

Insert the USB-C Cable and connect it to the Fast charging USB-C Power Supply to power Dock.

Pairing Button

Used primarily for manual pairing

Indicator LEDs

Indicate whether Player 1 - 4 is paired with Dock

Wired Controllers

Plug any hardwired USB controller that Dock supports into a USB port and it will instantly connect to Dock. You can also use and charge any supported wireless controller as a wired USB controller by adapting it with a USB cable.

Controllers - Dock 1.1 beta Firmware Supported Controllers

- Switch Pro (and variants)
- Switch Joycon Wiiu Pro
- Wiimote

- Xbox One
- PS3
- PS4
- PS5

- 8BitDo Pro 2
- 8BitDo Zero 2
- 8BitDo Lite
- 8BitDo Lite 2
- 8BitDo M30
- 8BitDo SN30
- 8BitDo SN30 Pro
- 8BitDo SN30 Pro+
- 8BitDo N30 Pro
- 8BitDo N30 Pro 2
- 8BitDo Arcade Stick

(BT & Wired USB only)

- 2.4g N30
- 2.4g N30 (Noir)
- 2.4g SN30
- 2.4g SN30 Classic
- 2.4g SF30
- 2.4g M30
- 2.4g M30 Classic
- 2.4g PCE

Pairing controllers to Dock

- 1. Press the pairing button on the back of Dock. P1 LED indicator will start to blink. Dock is now in Pairing mode.
- 2. Put your controller in pairing mode by pressing the pairing button.
- 3. Your controller will pair to Dock. Player indicator will become solid when a controller is paired, or wired controller connected to USB port.
- 4. Pair additional controllers from the OS menu or by repeating the above steps.

8bitdo Bluetooth Controllers should be put in X-input mode.

Pairing your PS4 controller: press and hold the PS button and Share button to enter pairing mode.

- 2.4g controllers will require new firmware to work properly with Dock and will disable compatibility with original NES, SNES, Genesis and USB controller port receivers. The firmware update can be reverted by the same method indicated to update the firmware.
- + If you experience any connectivity issues, please update your controller to the latest firmware at support.8bitdo.com
- + For most recent 2.4g and bluetooth firmware support.8bitdo.com/analogue/Dock
- + All 8BitDo controllers must be in X INPUT mode. Refer to your 8bitdo controller's manual for instructions on how to do this.

Resetting Dock

Restting will erase all paired controllers from the Dock.

Plug the USB-C power into Dock. Wait 4 seconds then press and hold the pairing button until the LEDs begin to flash green. Release the button before the green LEDs turn off. If successful, all four Dock LEDs will flash red.

Controllers

Main system(s) default button mapping across compatible game controllers. <u>All Bluetooth 8BitDo controllers</u> need to be in X-Input mode before pairing.

		GBA					GB/GBC				Game Gear				
	Menu	Α	В	L	R	ST	SE	Α	В	ST	SE	1	2	ST	
BitDo Controllers															
/ireless 2.4g															
N30	Home	Α	В	-	-	ST	SE	Α	В	ST	SE	В	Α	ST	
N30 Noir	Home	Α	В	-	-	ST	SE	Α	В	ST	SE	В	Α	ST	
SN30	↓+ SE	Α	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST	
SN30 Classic	↓+ SE	Α	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST	
SF30	↓+SE	Α	В	L	R	ST	SE	Α	В	ST	SE	В	Α	ST	
M30	Heart	В	Α	L	R	ST	-	В	Α	ST	-	Α	В	ST	
M30 Classic	Heart	В	Α	L	R	ST	-	В	Α	ST	-	Α	В	ST	
PCE	Heart	ļ	II			RN	SE	I	II	RN	SE	II	I	SE	
Vireless Bluetooth															
Pro 2	Heart	A	В	L	R	ST	SE	A	В	ST	SE	A	В	ST	
Zero 2	↓+ SE	A	В	L	R	ST	SE	A	В	ST	SE	В	A	ST	
Lite	Heart	A	В	L	R	+	-	A	В	+	-	В	A	+	
Lite 2	Heart	A	В	L	R	+	-	A	В	+	_	В	A	+	
M30	Heart	В В	A	L	R	ST	-	В	A	ST		A	B	ST	
SN30	↓+ SE	A	B	L	R	ST	SE	A	B	ST	SE	В	A	ST	
SN30 Pro	Heart	A	В	L	R	ST	SE	A	В	ST	SE	A	B	ST	
SN30 Pro+	Heart	A	В	L	R	ST	SE	A	В	ST	SE	A	В	ST	
N30 Pro	Home	A	В	L	R	ST	SE	A	В	ST	SE	В	A	ST	
N30 Pro 2	Home	A	В	L	R	ST	SE	A	В	ST	SE	В	A	ST	
	Heart	A	В	L	R	ST	SE	A	В	ST	SE	В	A	ST	
Arcade Stick	пеат		В	<u> </u>	K	31	36	Α	Ь	31	3E	В		31	
		GBA					GB/GBC					Game Gear			
		GBA						GB/G	BC.			Gaiii	e Gear		
	Menu	GBA A	В	L	R	ST	SE	GB/G A	В	ST	SE	1	e Gear 2	ST	
lon 8BitDo Controllers	Menu		В	L	R	ST	SE			ST	SE			ST	
on 8BitDo Controllers	Menu		В	L	R	ST	SE			ST	SE			ST	
/ireless Switch Pro	Home	A	В	L	R	ST +	SE	A	В	ST +	SE -		2 A	+	
Vireless Switch Pro Switch Joycon	Home Home	A A X	B A	L	R R			A A X	B B A			1 B A	2 A X		
/ireless Switch Pro	Home	A A X A	В	L L	R	+	-	A A X A	В	+	-	1 B	2 A X A	+	
/ireless Switch Pro Switch Joycon	Home Home	A A X	B A	L	R R	+ +/-	- Joy in	A A X	B B A	+ + / -	- Joy in	1 B A	2 A X	+ + / -	
Vireless Switch Pro Switch Joycon Wiiu Pro	Home Home Home	A A X A	B A B	L L	R R R	+ + / - +	- Joy in	A A X A	B B A B	+ + / - +	- Joy in	1 B A B	2 A X A	+ + / - +	
Switch Pro Switch Joycon Wiiu Pro Wiimote PS3	Home Home Home Home	A	B A B	L L L	R R R	+ + / - + + +	- Joy in -	A X A 2	B B A B 1	+ + / - + +	- Joy in -	1 B A B 1	2 A X A 2	+ + / - + + ST	
Vireless Switch Pro Switch Joycon Wiiu Pro Wiimote	Home Home Home Home PS	A X A 2 O	B A B	L L L B	R R R A	+ +/- + + ST	Joy in - SE	A X A 2 O	B B A B 1 X	+ +/- + + ST	- Joy in - - SE	1 B A B 1 X	2 A X A 2 O	+ + / - + + +	



Analogue. Docked.